

SENTRY SERIES ADJUSTABLE GAS BLOCKS

- At the front of the gas block is a 15-position adjustment screw; turning it clockwise to Position 0 will close it to zero gas flow. Turning it counter-clockwise to Position 15 will open it to max gas flow.
- If needed, contact cleaner and compressed air can be used to clean the individual parts.
- Do not over-oil the adjustment screw. A light oiling followed by a wipe-down is all that's needed before re-installing the screw.
- When cleaning the rifle, turn the adjustment screw to Position 0 before using bore cleaner. Afterward, return the screw to the preferred position. This will clear any carbon buildup that has occurred.
- Shooting .22 ammunition should be done with the adjustment screw in Position 0.
- Clamp-on and set screw bolt torque values are 25in lbs. Micro torque wrenches can vary, use common sense and moderate force, not much is needed to hold the gas blocks in place.

Thank you for your purchase!

Contact us at (855) 757-7435 or www.slrrifleworks.com with questions or comments.